














Chrysler Group LLC Supplemental Restraint System Post Deployment Inspection & Replacement Matrix 2007-2013

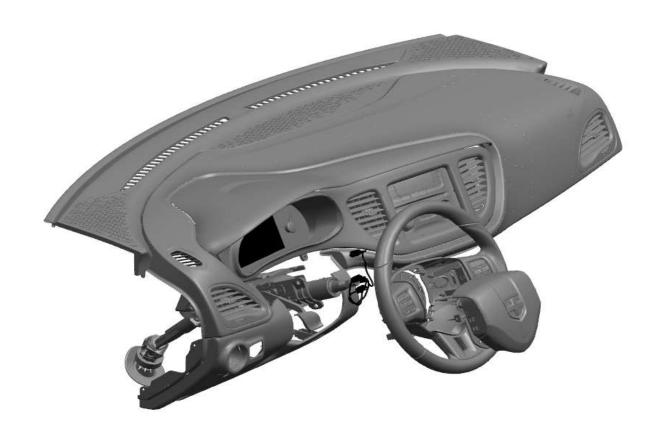

General Information and Warnings

NOTE:

ORC = Occupant Restraint Controller SRS = Supplemental Restraint System

NOTE: Any vehicle which is to be returned to use following an SRS component deployment must have the deployed restraints replaced. All other vehicle components should be closely inspected following any SRS component deployment, but are to be replaced only as required by the extent of the visible damage incurred.

WARNING: Following ANY major vehicle impact damage in the vicinity of an impact sensor or the ORC - It is critical that the mounting surfaces and mounting brackets for the ORC, front impact sensors and side impact sensors located within the proximity of the impact damage be closely inspected and restored to their original conditions. Because the ORC and each impact sensor are used by the SRS to monitor or confirm the direction and severity of a vehicle impact, improper orientation or insecure fastening of these components may cause airbags not to deploy when required, or to deploy when not required. The ORC must be replaced if it or any of the mounting structure immediately surrounding it are damaged in any way.

WARNING: To avoid serious or fatal injury on vehicles equipped with the SRS, never attempt to repair the electrically conductive circuits or wiring components related to the SRS for which there is no MOPAR wiring repair kit. It is important to use ONLY the recommended splicing kit and procedure. For applicable and available MOPAR wiring repair kits, please visit the MOPAR Connector Web Site

(http://dto.vftis.com/mopar/disclaimer.asp). Inappropriate repairs can compromise the conductivity and current carrying capacity of these critical electrical circuits, which may cause SRS components not to deploy when required, or to deploy when not required. Only minor cuts or abrasions of wire and terminal insulation where the conductive material has not been damaged, or connector insulators where the integrity of the latching and locking mechanisms have not been compromised may be repaired. Any replacement airbag connector MUST be installed using the Chrysler approved wire crimping tool {MOPAR Part Number 05019912AA or Miller Special Tool Number 10042 (https://millerspecialtools.spx.com/Detail.aspx?id=1594)}, splice bands (MOPAR Part Number 05073034AA), and adhesive sealant-lined heat shrink tubing (MOPAR Part Number 04778570).

WARNING: To avoid serious or fatal injury during and following any seat belt or child restraint anchor service, carefully inspect all seat belts, buckles, mounting hardware, retractors, tether straps, and anchors for proper installation, operation, or damage. Replace any belt that is cut, frayed, or torn. Straighten any belt that is twisted. Tighten any loose fasteners. Replace any belt that has a damaged or ineffective buckle or retractor. Replace any belt that has a bent or damaged latch plate or anchor plate. Replace any child restraint anchor or the unit to which the anchor is integral that has been bent or damaged. Never attempt to repair a seat belt or child restraint component. Always replace damaged or ineffective seat belt and child restraint components with the correct, new and unused replacement parts listed in the Chrysler Mopar® Parts Catalog.

WARNING: To avoid serious or fatal injury on vehicles equipped with airbags, disable the SRS before attempting any steering wheel, steering column, airbag, seat belt tensioner, impact sensor or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the SRS. Failure to take the proper precautions could result in accidental airbag deployment.

WARNING: To avoid serious or fatal injury, do not attempt to dismantle an airbag unit or tamper with its inflator. Do not puncture, incinerate or bring into contact with electricity. Do not store at temperatures exceeding 93° C (200° F). An airbag inflator unit may contain sodium azide and potassium nitrate. These materials are poisonous and extremely flammable. Contact with acid, water, or heavy metals may produce harmful and irritating gases (sodium hydroxide is formed in the presence of moisture) or combustible compounds. An airbag inflator unit may also contain a gas canister pressurized to over 17.24 KPa (2500 psi). Failure to follow these instructions may result in possible serious or fatal injury.

WARNING: To avoid serious or fatal injury on vehicles equipped with side curtain airbags, disable the SRS before attempting any ORC diagnosis or service. The ORC contains a rollover sensor, which enables the system to deploy the side curtains in the event of a vehicle rollover event. If an ORC is accidentally rolled during service while still connected to battery power, the side curtain airbags will deploy. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the SRS. Failure to take the proper precautions could result in accidental airbag deployment.

WARNING: To avoid potential physical injury or damage to sensitive electronic circuits and systems, always disconnect and isolate the battery negative (ground) cable and the positive cable, then ground the positive cable to discharge the ORC capacitor before performing any welding operations on the vehicle. Failure to take the proper precautions could result in accidental airbag deployment, possible damage to the SRS circuits and components, and possible damage to other electronic circuits and components. Whenever a welding process is being performed within 12 inches (30 centimeters) of an electronic module or wiring harness, then that module or harness should be relocated out of the way, or disconnected. Always protect against component or vehicle damage from weld spatter by using weld blankets and screens.

WARNING: To avoid serious or fatal injury when handling a seat belt tensioner retractor, proper care should be exercised to keep fingers out from under the retractor cover or buckle scabbard and away from the seat belt webbing where it exits from the retractor cover or buckle cable where it exits from the scabbard.

WARNING: To avoid serious or fatal injury, replace all SRS components only with parts specified in the Chrysler Mopar® Parts Catalog. Substitute parts may appear interchangeable, but internal differences may result in inferior occupant protection.

WARNING: To avoid serious or fatal injury, the fasteners, screws, and bolts originally used for the Supplemental Restraint System (SRS) components must never be replaced with any substitutes. These fasteners have special coatings and are specifically designed for the SRS. Any time a new fastener is needed, replace it with the correct fasteners provided in the service package or specified in the Chrysler Mopar® Parts Catalog.

Chrysler 200 (JS)		
2011-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	• Clockspring	Steering Wheel
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	•Instrument Panel
deployed	•Instrument Panel Pad	
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•A, B, and C-Pillar Trim on deployed	Side Impact Sensors
	side	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When the seat airbag has deployed	Seat Airbag	Seat Belt Tensioners
	Seat Back Frame	
	Seat Back Foam	
	Seat Back Trim Cover	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed		undamaged are designed with the
		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
_		mounting location

*Must use Chrysler approved wire crimping tool and splices – see "General Information and Warnings"

Chrysler 300 (LX)		
2007-2010		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	•Steering Wheel	
	•Clockspring	
	 Steering Column Assembly 	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When Side Curtain Airbag has	•Side Curtain Airbag	Sunroof
deployed	•Headliner	•Sunroof Drain Tubes and Hoses
	•A, B, and C-Pillar Trim on deployed	Side Impact Sensors
	side of vehicle	•Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When Seat Airbag has deployed	•Seat Airbag	Seat Belt Tensioners
	•Seat Back Frame	
	•Seat Back Foam	
	Seat Back Trim Cover	
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire c	rimping tool and splices – see "Genera	I Information and Warnings"

Chrysler 300 (LX)		
2011-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	•Steering Wheel	
	•Clockspring	
	•Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When Inflatable Knee Blocker has	•Knee Blocker Airbag	Instrument Panel
deployed	•Steering Column Opening Cover	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	•Headliner	•Sunroof Drain Tubes and Hoses
	•A, B, and C-pillar trim on deployed	Side Impact Sensors
	side of vehicle	Seat Belt Tensioners
	•All seat belt retractors and buckles	
	in use	
When Seat Airbag has deployed	•Seat Airbag	•Seat Belt Tensioners
	•Seat Back Frame	
	•Seat Back Foam	
	•Seat Back Trim Cover	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed		undamaged are designed with the
		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire o	rimping tool and splices – see "Genera	I Information and Warnings"

Chrysler Aspen (HG)		
2007-2009		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	•Steering Wheel	
	Clockspring	
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	•Upper Instrument Panel Pad
deployed	 Passenger Airbag Wiring Harness, 	•Instrument Panel
	or Connector if available*	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	•Side Impact Sensors
	deployed side of vehicle	•Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire	crimping tool and splices – see "Genera	l Information and Warnings"

Replacement Mandatory	Inspection Mandatory
Driver Airbag	Airbag Control Module
•Clockspring	•Steering Wheel
Steering Column Assembly	
including Intermediate shaft/Coupler	
Seat Belt Tensioners	
•Seat Belt Buckles in use	
Passenger Airhag	Passenger Airbag mounting
	locations on Instrument Panel
•	Structure
	St. detaile
or connector if available	
Both driver and passenger Knee	
Blocker Airbags	
•Instrument Panel	
Seat Belt Tensioners	
Buckles in use	
Seat Airbag	Side Impact Sensors
Seat Airbag Trim Cover	
•Seat Belt Retractors and Buckles in	
use	
	•Lower Anchors and Tether for
	Children (LATCH)
	•Inspect all Trim Panels
	Airbag Control Module and
	mounting location
	 Driver Airbag Clockspring Steering Column Assembly including Intermediate shaft/Coupler Seat Belt Tensioners Seat Belt Buckles in use Passenger Airbag Instrument Panel Top Pad Passenger Airbag Wiring Harness, or Connector if available* Both driver and passenger Knee Blocker Airbags Instrument Panel Seat Belt Tensioners Buckles in use Seat Airbag Seat Airbag Trim Cover Seat Belt Retractors and Buckles in

Chrysler Pacifica (CS)		
2007-2008		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Seat weight bladder and sensor
	•Steering Wheel	• Front Impact Sensors
	•Clockspring	
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	Occupant Classification Module
deployed	•Instrument Panel Top Pad	(OCM)
	assembly	 Seat Weight Bladder and Sensor
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Inflatable Knee Blocker has	•Knee Blocker Airbag	
deployed	 Knee Blocker Airbag Trim Cover 	
	•Instrument Panel and Top Pad	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	•Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, and C-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	•Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	

Chrysler PT Cruiser (PT)		
2007-2010		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	Clockspring	•Steering Wheel
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Bassangar Airhag has	• Dassangar Airhag	Instrument Panel
When Passenger Airbag has	Passenger Airbag Airbag Cover	• Instrument Paner
deployed	Airbag Cover Descender Airbag Wiring Harness	
	Passenger Airbag Wiring Harness,or Connector if available*	
	or Connector II available	
When Inflatable Knee Blocker has	Knee Blocker Airbag	
deployed	•Knee Blocker Airbag Trim Cover	
	•Instrument Panel	
When the Seat Airbag has deployed	Seat Airbag	Occupant Classification
	Complete Seat Back Assembly	Module(OCM)
	•All Seat Belt Retractors and Buckles	Seat Weight Sensor
	in use	Seat Belt Tensioners
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location

Chrysler Sebring (JS)		
2007-2010		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	Clockspring	•Steering Wheel
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	•Instrument Panel
deployed	•Instrument Panel Pad	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When the Seat Airbag has deployed	Seat Airbag	Seat Belt Tensioners
	Seat Back Frame	
	Seat Back Foam	
	Seat Back Trim Cover	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed (2010 only)		undamaged are designed with the
		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire cr	imping tool and splices – see "Genera	I Information and Warnings"

Chrysler Town & Country (RS)

2007

2007		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	 Driver Airbag Steering Wheel Clockspring Steering Column Assembly including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles 	•Front Impact Sensors
	in use	
When Passenger Airbag has deployed	 Passenger Airbag Instrument Panel and Pad assembly Passenger Airbag Wiring Harness, or Connector if available* 	
When Inflatable Knee Blocker has deployed	 Knee Blocker Airbag Under Steering Column Cover Instrument Panel and Pad assembly 	
When Side Curtain Airbag has deployed	 Side Curtain Airbag Headliner Upper A, B, C and D-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use 	 Side impact sensor Seat weight bladder and sensor Seat needs to be recalibrated Seat Belt Tensioners
Any Deployment Event	III use	 Lower Anchors and Tether for Children (LATCH) Inspect all Trim Panels Occupant Restraint Controller and mounting location

Note: After an impact event, either front, rear, or side, the Occupant Classification System (OCS) components need to be inspected and replaced if found to be damaged. These components include the Occupant Classification Module (OCM), Passenger Airbag ON/Off Indicator, Seat Weight Bladder and Sensor. Whether replaced or not, the OCS must be re-zeroed to make sure that the system is within proper parameters to sense the occupants weight correctly.

*Must use Chrysler approved wire crimping tool and splices – see "General Information and Warnings"

Chrysler	
Town & Country (RT)	
2000 2012	

Clockspring Steering Column Assembly including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles in use When Passenger Airbag has Beployed Passenger Airbag Cover (2008- 2010) Panel, Instrument Upper (2011 and up) Passenger Airbag Wiring Harness, or Connector if available* When Inflatable Knee Blocker has Beployed (2011 and up) When Side Curtain Airbag has Beployed *Side Curtain Airbag *Headliner Upper A, B, C and D-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use When Seat Airbag has deployed *Seat Back Frame Seat Back Frame Seat Back Frame Seat Back Frame Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event *Seat Belt Tension and Tether for	2008-2013		
Clockspring Steering Column Assembly including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles in use When Passenger Airbag has Beployed Passenger Airbag Cover (2008- 2010) Panel, Instrument Upper (2011 and up) Passenger Airbag Wiring Harness, or Connector if available* When Inflatable Knee Blocker has Beployed (2011 and up) When Side Curtain Airbag has Beployed *Side Curtain Airbag *Headliner Upper A, B, C and D-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use When Seat Airbag has deployed *Seat Back Frame Seat Back Frame Seat Back Frame Seat Back Frame Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event *Seat Belt Tension and Tether for		Replacement Mandatory	Inspection Mandatory
Steering Column Assembly including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles in use Passenger Airbag Passenger Airbag Passenger Airbag Cover (2008-2010) Panel, Instrument Upper (2011 and up) Passenger Airbag Wiring Harness, or Connector if available* When Inflatable Knee Blocker has leployed (2011 and up) Passenger Airbag Wiring Harness, or Connector if available side Curtain Airbag Mounting Plate When Side Curtain Airbag has leployed Peadliner Upper A, B, C and D-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use When Seat Airbag has deployed Seat Back Frame Seat Back Frame Seat Back Frame Seat Back Frame Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event Passenger Airbag Pa	When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles in use Passenger Airbag Wiring Harness, or Connector if available* When Inflatable Knee Blocker has Passenger Airbag Wiring Harness, or Connector if available Passenger Airbag Passenger Airbag Passenger Airbag Wiring Harness, or Connector if available Passenger Airbag Passenger Airbag Wiring Harness, or Connector if available Passenger Airbag Passenger Airbag Wiring Harness, or Connector if available Passenger Airbag Passenger Airbag Wiring Harness, or Connector if available Passenger Airbag Passenger Airbag Passenger Airbag Passenger Airbag Wiring Harness, or Connector if available Passenger Airbag Passenger Airbag Wiring Harness, or Connector if available Passenger Airbag Passenger Airbag Wiring Harness, or Connector if available Passenger Airbag Passenger Airbag Passenger Airbag Wiring Harness, or Connector if available Passenger Airbag Passenger Passenger Passenger Airbag Passenger		• Clockspring	Steering Wheel
*Seat Belt Tensioners *All Seat Belt Retractors and Buckles in use *Passenger Airbag *Passenger Airbag *Passenger Airbag *Passenger Airbag Cover (2008-2010) *Panel, Instrument Upper (2011 and up) *Passenger Airbag Wiring Harness, or Connector if available* *Mhen Inflatable Knee Blocker has eleployed (2011 and up) *Passenger Airbag Wiring Harness, or Connector if available* *Mhen Side Curtain Airbag has eleployed (2011 and up) *Airbag Mounting Plate *Side Curtain Airbag *Side Impact Sensors *Seat Belt Tensioners *Seat Belt Tensioners *Seat Belt Tensioners *Seat Belt Tensioners *Active Head Restraint units that an undamaged are designed with the intention of reuse. *Any Deployment Event *Lower Anchors and Tether for		 Steering Column Assembly 	
*All Seat Belt Retractors and Buckles in use *Passenger Airbag *P		including Intermediate Shaft/Coupler	
in use *Passenger Airbag *Passenger Airbag *Passenger Airbag *Passenger Airbag *Passenger Airbag Cover (2008-2010) *Panel, Instrument Upper (2011 and up) *Passenger Airbag Wiring Harness, or Connector if available * *When Inflatable Knee Blocker has deployed (2011 and up) *Airbag Mounting Plate *Side Curtain Airbag has deployed *Headliner *Upper A, B, C and D-Pillar Trim on deployed side of vehicle *All Seat Belt Retractors and Buckles in use *When Seat Airbag has deployed *Seat Airbag *Seat Back Frame *Seat Back Trim Cover *When the Active Head Restraint AHR) has deployed (2010 and up) *Any Deployment Event *Instrument Panel *Instrument Panel *Sunroof *Seat Belt Tensioners *Seat Bel		•Seat Belt Tensioners	
## Passenger Airbag has ePassenger Airbag ePassenger Airbag Cover (2008-2010) ## Passenger Airbag Cover (2008-2010) ## Passenger Airbag Cover (2011 and up) ## Passenger Airbag Wiring Harness, or Connector if available* ## When Inflatable Knee Blocker has eleployed (2011 and up) ## When Side Curtain Airbag has eleployed ## Passenger Airbag Wiring Harness, or Connector if available* ## All Seat Belt Retractors and Buckles in use ## When Seat Airbag has deployed ## Passenger Airbag Wiring Harness, or Connector if available* ## All Seat Belt Retractors and Buckles in use ## Passenger Airbag Wiring Harness, or Connector if available* ## All Seat Blocker Airbag Sunroof ## Sunroof ## Sunroof ## Sunroof ## Sunroof ## Side Impact Sensors ## Seat Belt Tensioners ## Seat Belt Tensioners ## Seat Belt Tensioners ## Seat Belt Tensioners ## Active Head Restraint units that are undamaged are designed with the intention of reuse. ## Any Deployment Event ## Arctive Head Restraint units that are undamaged are designed with the intention of reuse. ## Description of the passenger Airbag Sunroof Passenger Airbag Sunroof ## S		•All Seat Belt Retractors and Buckles	
Passenger Airbag Cover (2008- 2010) Panel, Instrument Upper (2011 and up) Passenger Airbag Wiring Harness, or Connector if available* When Inflatable Knee Blocker has deployed (2011 and up) When Side Curtain Airbag has deployed Pheadliner Upper A, B, C and D-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use When Seat Airbag has deployed When Seat Airbag has deployed When Seat Airbag has deployed When Seat Back Frame Seat Back From Seat Back Frim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event Passenger Airbag Cover (2008- 2010) Panel, Instrument Upper (2011 and up) Side Curtain Airbag Side Curtain Airbag Sunroof Sunroof Drain Tubes and Hoses Side Impact Sensors Seat Belt Tensioners Seat Belt Tensioners *Seat Belt Tensioners *Active Head Restraint units that an undamaged are designed with the intention of reuse. *Any Deployment Event *Lower Anchors and Tether for		in use	
2010) Panel, Instrument Upper (2011 and up) Passenger Airbag Wiring Harness, or Connector if available* When Inflatable Knee Blocker has deployed (2011 and up) When Side Curtain Airbag has deployed Pheadliner Upper A, B, C and D-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use When Seat Airbag has deployed When Seat Airbag has deployed Seat Airbag Seat Back Frame Seat Back Frame Seat Back From Seat	When Passenger Airbag has	Passenger Airbag	Instrument Panel
2010) Panel, Instrument Upper (2011 and up) Passenger Airbag Wiring Harness, or Connector if available* When Inflatable Knee Blocker has deployed (2011 and up) When Side Curtain Airbag has deployed Pheadliner Upper A, B, C and D-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use When Seat Airbag has deployed When Seat Airbag has deployed Seat Airbag Seat Back Frame Seat Back Frame Seat Back From Seat	deployed	Passenger Airbag Cover (2008-	
up) Passenger Airbag Wiring Harness, or Connector if available* **Mhen Inflatable Knee Blocker has deployed (2011 and up) **Mhen Side Curtain Airbag has deployed **Headliner **Upper A, B, C and D-Pillar Trim on deployed side of vehicle **All Seat Belt Retractors and Buckles in use **Mhen Seat Airbag has deployed **Seat Airbag **Seat Back Frame **Seat Back Frame **Seat Back From **Seat Back Trim Cover **Mhen the Active Head Restraint AHR) has deployed (2010 and up) **Any Deployment Event **Instrument Panel **Instrument Panel **Sunroof **Sunroof Drain Tubes and Hoses **Side Impact Sensors **Seat Belt Tensioners **Seat Belt Tensioners **Seat Belt Tensioners **Active Head Restraint units that are undamaged are designed with the intention of reuse. **Lower Anchors and Tether for			
Passenger Airbag Wiring Harness, or Connector if available* When Inflatable Knee Blocker has deployed (2011 and up) When Side Curtain Airbag has deployed Personal Belt Retractors and Buckles in use When Seat Airbag has deployed Personal Back Frame Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Personal Buckles in use Passenger Airbag Wiring Harness, or Connector if available* Personal Buckles in use Personal Back Frame Seat Back Frame Seat Back Trim Cover Pactive Head Restraint units that an undamaged are designed with the intention of reuse. Pany Deployment Event Personal Back Frame Seat Back Trim Cover Pactive Head Restraint units that an undamaged are designed with the intention of reuse. Pany Deployment Event		•Panel, Instrument Upper (2011 and	
or Connector if available* When Inflatable Knee Blocker has deployed (2011 and up) When Side Curtain Airbag has deployed Side Curtain Airbag Headliner Upper A, B, C and D-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use When Seat Airbag has deployed Seat Back Frame Seat Back Frame Seat Back Fromm Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event Siknee Blocker Airbag Sinuse Sinuse Sunroof Sunroof Drain Tubes and Hoses Sunroof Drain Tubes and Hoses Seat Back Frame Seat Belt Tensioners Seat Belt Tensioners Active Head Restraint units that are undamaged are designed with the intention of reuse. Lower Anchors and Tether for		up)	
When Inflatable Knee Blocker has deployed (2011 and up) When Side Curtain Airbag has deployed When Side Curtain Airbag has deployed When Seat Airbag has deployed When the Active Head Restraint AHR) has deployed (2010 and up) When Seat Airbag has deployed When Seat Back Frame Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event When Inflatable Knee Blocker Airbag Side Curtain Airbag Sunroof Sunroof Sunroof Sunroof Sunroof Sunroof Sunroof Seat Belt Tensioners		Passenger Airbag Wiring Harness,	
Arry Deployment Event - Side Curtain Airbag Mounting Plate - Airbag Mounting Plate - Side Curtain Airbag - Side Curtain Airbag - Sunroof Drain Tubes and Hoses - Seat Belt Tensioners - Seat B		or Connector if available*	
Arry Deployment Event - Side Curtain Airbag Mounting Plate - Airbag Mounting Plate - Side Curtain Airbag - Side Curtain Airbag - Sunroof Drain Tubes and Hoses - Seat Belt Tensioners - Seat B			
## Side Curtain Airbag		_	•Instrument Panel
• Headliner • Upper A, B, C and D-Pillar Trim on deployed side of vehicle • All Seat Belt Retractors and Buckles in use When Seat Airbag has deployed • Seat Airbag • Seat Back Frame • Seat Back Frame • Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event • Headliner • Upper A, B, C and D-Pillar Trim on deployed side of vehicle • Side Impact Sensors • Seat Belt Tensioners • Seat Belt Tensioners • Active Head Restraint units that are undamaged are designed with the intention of reuse. • Lower Anchors and Tether for			
Output A, B, C and D-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use Seat Airbag has deployed Seat Back Frame Seat Back Foam Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event O Side Impact Sensors Seat Belt Tensioners O Seat Belt Tensioners			
deployed side of vehicle •All Seat Belt Retractors and Buckles in use **Nhen Seat Airbag has deployed** •Seat Airbag •Seat Back Frame •Seat Back Frame •Seat Back Fromm •Seat Back Trim Cover **Nhen the Active Head Restraint AHR) has deployed (2010 and up) **Any Deployment Event** •Seat Belt Tensioners •Active Head Restraint units that are undamaged are designed with the intention of reuse. •Lower Anchors and Tether for	deployed		
•All Seat Belt Retractors and Buckles in use •Nhen Seat Airbag has deployed •Seat Airbag •Seat Back Frame •Seat Back Foam •Seat Back Trim Cover •Active Head Restraint units that are undamaged are designed with the intention of reuse. •Any Deployment Event •All Seat Belt Retractors and Buckles in use •Seat Back Frame •Active Head Restraint units that are undamaged are designed with the intention of reuse. •Lower Anchors and Tether for			1
in use When Seat Airbag has deployed • Seat Airbag • Seat Back Frame • Seat Back Foam • Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event • Seat Airbag • Seat Back Frame • Active Head Restraint units that are undamaged are designed with the intention of reuse. • Lower Anchors and Tether for			•Seat Belt Tensioners
When Seat Airbag has deployed • Seat Airbag • Seat Belt Tensioners • Seat Back Frame • Seat Back Foam • Active Head Restraint units that are undamaged are designed with the intention of reuse. Any Deployment Event • Lower Anchors and Tether for			
Seat Back Frame Seat Back Foam Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event Seat Back Frame Seat Ba	When Seat Airbag has deployed		Soat Polt Tonsioners
Seat Back Foam Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event Seat Back Trim Cover Any Deployment Event • Active Head Restraint units that are undamaged are designed with the intention of reuse. • Lower Anchors and Tether for	When Seat All bag has deployed		Seat beit relisioners
Seat Back Trim Cover When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event • Seat Back Trim Cover • Active Head Restraint units that are undamaged are designed with the intention of reuse. • Lower Anchors and Tether for			
When the Active Head Restraint AHR) has deployed (2010 and up) Any Deployment Event • Active Head Restraint units that are undamaged are designed with the intention of reuse. • Lower Anchors and Tether for			
AHR) has deployed (2010 and up) undamaged are designed with the intention of reuse. Any Deployment Event • Lower Anchors and Tether for	When the Active Head Restraint	Seat Back Hilli Cover	• Active Head Restraint units that are
intention of reuse. Any Deployment Event • Lower Anchors and Tether for			
Any Deployment Event •Lower Anchors and Tether for	(,,as aspis, sa (2020 a.i.a ap)		1
, , ,	Any Deployment Event		
ICHIIGREN (LATCH)			Children (LATCH)
•Inspect all Trim Panels			1
Occupant Restraint Controller and			'
mounting location			· '
*Must use Chrysler approved wire crimping tool and splices – see "General Information and Warnings"	*Must use Chrysler approved wire co	rimping tool and splices – see "Genera	

Dodge Avenger (JS)		
2007-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	Clockspring	•Steering Wheel
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	•Instrument Panel
deployed	•Instrument Panel Pad	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, and C-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When the Seat Airbag has deployed	•Seat Airbag	•Seat Belt Tensioners
	•Seat Back Frame	
	Seat Back Foam	
	Seat Back Trim Cover	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed (2010 and up)		undamaged are designed with the
Any Douleymont Front		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
*Must use Chrysler approved wire cr	I imping tool and splices – see "Genera	mounting location Information and Warnings"
wast use citi yster approved wite ci	miping tool and splices – see Gellera	i intormation and warnings

Dodge Caliber (PM)		
2007-2012		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	 Driver Airbag Clockspring Steering Column Assembly including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles in use 	Front Impact Sensors Steering Wheel
When Passenger Airbag has	Passenger Airbag	•Instrument Panel
deployed	 Passenger Airbag Cover (2007-2010) Instrument Panel Cover (2011 and up) Passenger Airbag Wiring Harness, or Connector if available* 	
When Inflatable Knee Blocker has	•Knee Blocker Airbag	
deployed	•Instrument Panel	
When Side Curtain Airbag has	Side Curtain Airbag	•Sunroof
deployed	HeadlinerUpper A, B, C and D-Pillar Trim on	Sunroof Drain Tubes and HosesSide Impact Sensors
	deployed side of vehicleAll Seat Belt Retractors and Buckles in use	•Seat Belt Tensioners
When the Seat Airbag has deployed	Seat Airbag Seat Back Frame Seat Back Foam Seat Back Trim Cover Seat Wiring Harness	•Seat Belt Tensioners
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed (2010 and up)		undamaged are designed with the intention of reuse.
Any Deployment Event	imping tool and splices – see "Genera	 Lower Anchors and Tether for Children (LATCH) Inspect all Trim Panels Occupant Restraint Controller and mounting location

Dodge Caravan (RS)		
2007		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front impact sensors
	•Steering Wheel	
	Clockspring	
	 Steering Column Assembly 	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
NA/Ibaa Baasaa Atalaa Ibaa	December At the co	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel and Pad assembly	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When Inflatable Knee Blocker has	•Knee Blocker Airbag	
deployed	•Under Steering Column Cover	
	•Instrument Panel and Pad	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	Headliner	Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
Any Deployment Event	in use	Children (LATCH) •Inspect all Trim Panels

Note: After an impact event, either front, rear, or side, the Occupant Classification System (OCS) components need to be inspected and replaced if found to be damaged. These components include the Occupant Classification Module (OCM), Passenger Airbag ON/Off Indicator, Seat Weight Bladder and Sensor. Whether replaced or not, the OCS must be re-zeroed to make sure that the system is within proper parameters to sense the occupants weight correctly.

*Must use Chrysler approved wire crimping tool and splices – see "General Information and Warnings"

mounting location

Dodge Caravan (RT)		
2008-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	Clockspring	Steering Wheel
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	Instrument Panel
deployed	Passenger Airbag Cover (2008-	
	2010)	
	•Panel, Instrument Upper (2011 and	
	lup)	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When Inflatable Knee Blocker has	Knee Blocker Airbag	•Instrument Panel
deployed (2011 and up)	Airbag Mounting Plate	
When Side Curtain Airbag has	Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When the Seat Airbag has deployed	Seat Airbag	•Seat Belt Tensioners
	Seat Back Frame	
	Seat Back Foam	
	Seat Back Trim Cover	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed (2010 and up)		undamaged are designed with the
		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire cr	imping tool and splices – see "Genera	I Information and Warnings"

Dodge Challenger (LC)		
2008-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	 Driver Airbag Steering Wheel Clockspring Steering Column Assembly including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles in use 	•Front Impact Sensors
When Passenger Airbag has deployed	 Passenger Airbag Instrument Panel Passenger Airbag Wiring Harness, or Connector if available* 	
When Side Curtain Airbag has deployed	 Side Curtain Airbag Headliner Upper A, B, and C-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use 	 Sunroof Sunroof Drain Tubes and Hoses Side Impact Sensors Seat Belt Tensioners
When the Seat Airbag has deployed (2011 and up)	Seat Airbag Seat Back Frame Seat Back Foam Seat Back Trim Cover Seat Airbag Jumper Wiring Harness Thermoplastic Chute	•Seat Belt Tensioners
When the Active Head Restraint (AHR) has deployed (2011 and up)		•Active Head Restraint units that are undamaged are designed with the intention of reuse.
*Must use Chrysler approved wire cr	imping tool and splices – see "Genera	 Lower Anchors and Tether for Children (LATCH) Inspect all Trim Panels Occupant Restraint Controller and mounting location

Dodge Charger (LX)		
2007-2010		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	•Steering Wheel	
	•Clockspring	
	 Steering Column Assembly 	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel	
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	•Headliner	•Sunroof Drain Tubes and Hoses
	●Upper A, B, and C-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When Seat Airbag has deployed	•Seat Airbag	Seat Belt Tensioners
	•Seat Back Frame	
	•Seat Back Foam	
	•Seat Back Trim Cover	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed (2010 only)		undamaged are designed with the
		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
*Nucture Charles approved	vimning tool and college and "Caraca	mounting location
"iviust use Chrysier approved wire c	rimping tool and splices – see "Genera	i information and warnings"

Dodge Charger (LD)]	
2011-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	• Front Impact Sensors
	•Steering Wheel	
	• Clockspring	
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel	
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Inflatable Knee Blocker has	•Knee Blocker Airbag	•Instrument Panel
deployed	•Instrument Panel Steering Column	
	Cover	
When Side Curtain Airbag has	Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, and C-pillar trim on	Side Impact Sensors
	deployed side of vehicle	•Seat Belt Tensioners
	•All seat belt retractors and buckles	
	in use	
When Seat Airbag has deployed	Seat Airbag	Seat Belt Tensioners
	Seat Back Frame	
	Seat Back Foam	
	Seat Back Trim Cover	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed		undamaged are designed with the
		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire ci	imping tool and splices – see "Genera	I Information and Warnings"

Dodge Dart (PF)		
2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	 Driver Airbag Clockspring Steering Column Front Seat Belt Anchor Tensioners Front Seat Belt Retractor Assemblies Any Seat Belt Buckle in use 	Front Impact Sensors Steering Wheel
When Passenger Airbag has deployed	Passenger Airbag Instrument Panel	
When Side Curtain Airbag has deployed	 Side Curtain Airbag Headliner Upper A, B, and C-Pillar Trim on deployed side of vehicle 	Sunroof Drain Tubes and Hoses Side Impact Sensors
When Seat Airbag has deployed	 Seat Airbag Seat Back Frame Seat Back Foam Seat Back Trim Cover Front Seat Belt Retractor Assembly Front Seat Belt Retractor Anchors Front Seat Belt Buckles in use 	•Inspect all trim panels
When Rear Seat Airbag has deployed	Seat Airbag Seat Frame Seat Foam Seat Trim Cover Front Seat Belt Retractor Assembly Front Seat Belt Retractor Anchors Rear Seat Belt Retractors and Buckles in use	
When Inflatable Knee Blocker has deployed	 Knee Blocker Airbags Instrument panel steering Column Opening Cover Glove box 	
Any Deployment Event	GIOVE BOX	Lower Anchors and Tether for Children (LATCH)Inspect all Trim Panels

Dodge Durango (HB)		
2007-2009		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	 Driver Airbag Steering Wheel Clockspring Steering Column Assembly including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles in use 	•Front Impact Sensors
When Passenger Airbag has deployed	 Passenger Airbag Passenger Airbag Wiring Harness, or Connector if available* 	Upper Instrument Panel Pad Instrument Panel
When Side Curtain Airbag has deployed	 Side Curtain Airbag Headliner Upper A, B, C and D-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles in use 	 Sunroof Sunroof Drain Tubes and Hoses Side Impact Sensors Seat Belt Tensioners
*Must use Chrysler approved wire a	rimping tool and splices – see "Genera	Lower Anchors and Tether for Children (LATCH) Inspect all Trim Panels Occupant Restraint Controller and mounting location

Dodge Durango (WD)		
2011-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	 Driver Airbag Steering Column Control Module/Clockspring (SCCM) Steering Column Assembly including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles in use 	Front impact sensors Steering Wheel
When Passenger Airbag has	Passenger Airbag	
deployed	 Instrument Panel Passenger Airbag Wiring Harness, or Connector if available* 	
When only the Seat Belt Tensioners	Seat Belt Tensioners	
have deployed	•Seat Belt Buckles in use	
When Side Curtain Airbag has	Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle • All Seat Belt Retractors and Buckles	•Seat Belt Tensioners
When Seat Airbag has deployed	In use Seat Airbag	Seat Belt Tensioners
Trien seat / in sug nus deployed	Seat Back Frame Seat Back Foam	Seat Belt Tellisioners
When the Active Head Restraint	Seat Back Trim Cover	Active Head Restraint units that are
(AHR) has deployed		undamaged are designed with the intention of reuse.
Any Deployment Event		 Lower Anchors and Tether for Children (LATCH) Inspect all Trim Panels Occupant Restraint Controller and mounting location

Dodge Journey (JC)		
2009-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	•Clockspring	•Steering Wheel
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When the Seat Airbag has deployed	Seat Airbag	•Seat Belt Tensioners
	Seat Back Frame	
	Seat Back Foam	
	Seat Back Trim Cover	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed (2010 and up)		undamaged are designed with the
		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		■Inspect all Trim Panels
		Occupant Restraint Controller and
	 imping tool and splices – see "Genera	mounting location

Dodge Magnum (LX)]	
2007-2008		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	•Steering Wheel	
	Clockspring	
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When Side Curtain Airbag has	Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, and C-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When Seat Airbag has deployed	Seat Airbag	•Seat Belt Tensioners
	Seat Back Frame	
	Seat Back Foam	
	Seat Back Trim Cover	
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire ci	imping tool and splices – see "Genera	I Information and Warnings"

Dodge Nitro (KA)		
2007-2011		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	• Clockspring	Steering Wheel
	 Steering Column Assembly 	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	•Instrument Panel
deployed	Passenger Airbag Door	
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Side Curtain Airbag has	Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	•Side Impact Sensors
	deployed side of vehicle	•Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire cr	rimping tool and splices – see "Genera	I Information and Warnings"

Dodge Sprinter (VB)		
2007-2008		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	Airbag Control Module
	•Steering Wheel	
	Steering Control Module	
	(SCM)/Clockspring	
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When only the Seat Belt Tensioners	Seat Belt Tensioners	
have deployed	•Seat Belt Buckles in use	
When Side Curtain Airbag has	•Side Curtain Airbag	Side Impact Sensors
deployed	Headliner	
	•Upper A, and B-Pillar Trim on	
	deployed side of vehicle	
	Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Seat Airbag has deployed	Seat Airbag	Side Impact Sensors
	Seat Airbag Cover	Seat Frame
	Seat Belt Tensioners	
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Airbag Control Module and
		mounting location
*Must use Chrysler approved wire cr	imping tool and splices – see "Genera	I Information and Warnings"

Dodge Viper (ZB)		
2008-2010		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	•Steering Wheel	
	•Clockspring	
	 Steering Column Assembly 	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel	
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire o	rimping tool and splices – see "Genera	I Information and Warnings"

Fiat 500 (FF)		
2012-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	•Clockspring	•Steering Wheel
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•Anchor Buckle Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel	
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Inflatable Knee Blocker has	•Knee Blocker Airbag	•Instrument Panel
deployed	Steering Column Opening Cover	
When Side Curtain Airbag has	Side Curtain Airbag	•Sunroof
deployed	•Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, and C-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	•Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When Seat Airbag has deployed	•Seat Airbag	Seat Belt Tensioners
	•Seat Back Frame	
	•Seat Back Foam	
	Seat Back Trim Cover	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed		undamaged are designed with the
		intention of reuse
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire o	rimping tool and splices – see "Genera	I Information and Warnings"

Jeep Commander (XK)]	
2007-2010		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	Clockspring/Steering Control	•Steering Wheel
	Module (SCM) (2007 Only)	
	•Clockspring (2008-2010)	
	 Steering Column Assembly 	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Upper Instrument Panel Pad	
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	•Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	•Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire c	rimping tool and splices – see "Genera	I Information and Warnings"

Jeep Compass (MK)		
2007-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	•Clockspring	•Steering Wheel
	 Steering Column Assembly 	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	•Instrument Panel
deployed	Passenger Airbag Cover (2007-	
	2010)	
	•Instrument Panel Cover (2011 and	
	up)	
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	•Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	•Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When Seat Airbag has deployed	•Seat Airbag	Seat Belt Tensioners
	•Seat Back Frame	
	•Seat Back Foam	
	•Seat Back Trim Cover	
	Seat Wiring Harness	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed (2010 and up)		undamaged are designed with the
		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire c	rimping tool and splices – see "Genera	I Information and Warnings"

Jeep Grand Cherokee (WK)

	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front impact sensors
	Clockspring/Steering Control	Steering Wheel
	Module (2007)	
	•Clockspring (2008-2010)	
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Upper Instrument Panel	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When only the Seat Belt Tensioners	•Seat Belt Tensioners	
have deployed	•Seat Belt Buckles in use	
When Side Curtain Airbag has	Side Curtain Airbag	Sunroof
deployed	Headliner	 Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
Any Deployment Event		Lower Anchors and Tether for
		Children (LATCH)
		Inspect all Trim Panels
		 Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire cr	rimping tool and splices – see "Genera	I Information and Warnings"

Jeep Grand Cherokee (WK) 2011-2013

2011-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front impact sensors
	Steering Column Control Module	Steering Wheel
	(SCCM)/Clockspring	
	•Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	
deployed	•Instrument Panel	
	Passenger Airbag Wiring Harness,	
	or Connector if available*	
When Inflatable Knee Blocker has	Knee Blocker Airbag	
deployed (if equipped)	•Instrument Panel	
When only the Seat Belt Tensioners	Seat Belt Tensioners	
have deployed	Seat Belt Buckles in use	
When Side Curtain Airbag has	Side Curtain Airbag	Sunroof
deployed	Headliner	 Sunroof Drain Tubes and Hoses
	•Upper A, B, and C-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When Seat Airbag has deployed	Seat Airbag	Seat Belt Tensioners
	Seat Back Frame	
	Seat Back Foam	
	Seat Back Trim Cover	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed		undamaged are designed with the
		intention of reuse.
Any Deployment Event		Lower Anchors and Tether for
		Children (LATCH)
		Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire cr	imping tool and splices – see "Genera	

Jeep Liberty (KJ-KK)		
2007-2012		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	Clockspring	Steering Wheel
	Steering Column Assembly	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	•Instrument Panel
deployed	Passenger Airbag Mounting	
	Brackets (2007 Only)	
	Passenger Airbag Door	
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Side Curtain Airbag has	Side Curtain Airbag	•Sunroof
deployed	Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed (2010 and up)		undamaged are designed with the
		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire cr	imping tool and splices – see "Genera	I Information and Warnings"

Jeep Patriot (MK)		
2007-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	 Driver Airbag Clockspring Steering Column Assembly including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles in use 	•Front Impact Sensors •Steering Wheel
When Passenger Airbag has deployed	 Passenger Airbag Passenger Airbag Cover (2007-2010) Instrument Panel Cover (2011 and up) Passenger Airbag Wiring Harness, or Connector if available* 	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	•Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, C and D-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	•Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
When Seat Airbag has deployed	•Seat Airbag	Seat Belt Tensioners
	•Seat Back Frame	
	•Seat Back Foam	
	•Seat Back Trim Cover	
	Seat Wiring Harness	
When the Active Head Restraint		•Active Head Restraint units that are
(AHR) has deployed (2010 and up)		undamaged are designed with the
		intention of reuse.
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire c	rimping tool and splices – see "General	Information and Warnings"

Jeep Wrangler (JK)		
2007-2013		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	•Clockspring	•Steering Wheel
	 Steering Column Assembly 	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag	•Instrument Panel
deployed	Passenger Airbag Door	
	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Seat Airbag has deployed	Seat Airbag	Seat Belt Tensioners
	•Seat Back Frame	•Side Impact Sensors
	•Seat Back Foam	
	•Seat Back Trim Cover	
	•Seat Wiring Harness (Only 2007)	
Any Deployment Event		•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire o	rimping tool and splices – see "Genera	I Information and Warnings"

Ram Dakota (ND)		
2007-2011		
	Replacement Mandatory	Inspection Mandatory
When Driver Airbag has deployed	Driver Airbag	•Front Impact Sensors
	Clockspring	•Steering Wheel
	 Steering Column Assembly 	
	including Intermediate Shaft/Coupler	
	•Seat Belt Tensioners	
	•All Seat Belt Retractors and Buckles	
	in use	
When Passenger Airbag has	Passenger Airbag & Door Assembly	•Instrument Panel
deployed	 Passenger Airbag Wiring Harness, 	
	or Connector if available*	
When Side Curtain Airbag has	•Side Curtain Airbag	•Sunroof
deployed	•Headliner	•Sunroof Drain Tubes and Hoses
	•Upper A, B, and C-Pillar Trim on	Side Impact Sensors
	deployed side of vehicle	•Seat Belt Tensioners
	•All Seat Belt Retractors and Buckles	
	in use	
Any Deployment Event	1	•Lower Anchors and Tether for
		Children (LATCH)
		•Inspect all Trim Panels
		Occupant Restraint Controller and
		mounting location
*Must use Chrysler approved wire co	rimping tool and splices – see "Genera	I Information and Warnings"

Ram Full Size DR-DS, DH-DJ, DC-DD, D1-D2, DM-DP 2007-2013

Replacement Mandatory	Inspection Mandatory
Driver Airbag	•Front Impact Sensors
•Clockspring	•Steering Wheel
Steering Column Assembly	
including Intermediate Shaft/Coupler	
•Seat Belt Tensioners	
•All Seat Belt Retractors and Buckles	
in use	
Passenger Airbag	•Instrument Panel - 2007-2008 DR &
• Passenger Airbag Door - 2007-2008	2007-2009 DH/DC/D1/DM
DR & 2007-2009 DH/DC/D1/DM	
•Instrument Panel - 2009 and up DS	
& 2010 and up	
DJ/DC/DD/D2/DM/DP	
 Passenger Airbag Wiring Harness, 	
or Connector if available*	
Side Curtain Airbag	•Sunroof
Headliner	•Sunroof Drain Tubes and Hoses
•Upper A, B, and C-Pillar Trim on	Side Impact Sensors
deployed side of vehicle	•Seat Belt Tensioners
•All Seat Belt Retractors and Buckles	
in use	
	•Lower Anchors and Tether for
	Children (LATCH)
	•Inspect all Trim Panels
	Occupant Restraint Controller and
	mounting location
	 Driver Airbag Clockspring Steering Column Assembly including Intermediate Shaft/Coupler Seat Belt Tensioners All Seat Belt Retractors and Buckles in use Passenger Airbag Passenger Airbag Door - 2007-2008 DR & 2007-2009 DH/DC/D1/DM Instrument Panel - 2009 and up DS & 2010 and up DJ/DC/DD/D2/DM/DP Passenger Airbag Wiring Harness, or Connector if available* Side Curtain Airbag Headliner Upper A, B, and C-Pillar Trim on deployed side of vehicle All Seat Belt Retractors and Buckles

*Must use Chrysler approved wire crimping tool and splices – see "General Information and Warnings"

- •DR-DS 1500
- •DH-DJ 2500 (and 1500 MegaCab)
- •DC-DD 3500 Cab Chassis
- •D1-D2 3500 Pickup
- •DM-DP 4500/5500